



1. Does the Center of Gravity or the Center of Mass for the crane change with the different load (L1, L2, L3) locations and why?
- Assume the load weight, boom angle or boom height never change.